


Step 1 – Double Check Measurements & Check for Obstacles:

- Unpack your blind and fittings.
- Hold the blind up to the position on the inside of the window you wish to install it to ensure it to ensure all measurements are correct & the blind fits in the desired position.
- Check for any potential obstructions such as handles – to try and avoid these when installing.



Step 2 – Mounting Clips:

- Install mounting clips to the underside, top of the window frame. These should be 65mm minimum distance from the actual window (this will allow the vertical blinds to open and close)
- Ensure the clips on either end are at least 50mm from the edge of the window frame.
- Ensure the shorter edge of the clip is facing the front.
- Place the clips evenly along the window frame, securing with one mounting screw through the hole of each clip.

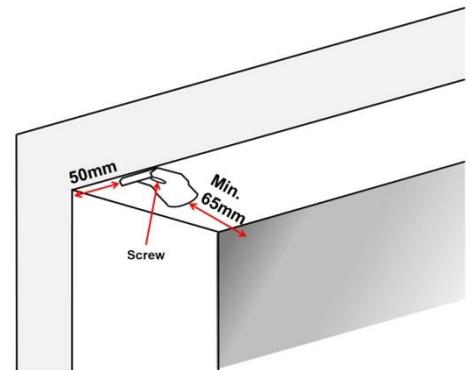


Step 3 – Inserting the track:

- Ensure you position the pull cord on the left or right as desired.
- Snap the track into place by placing the front edge into the mounting clips
- Raise the back of the track and push it up into the clip until you hear a "click"
- Place pressure in an upwards motion near each clip, to ensure the track has secured into each clip correctly.

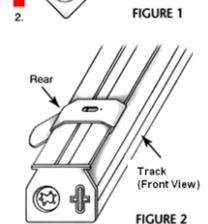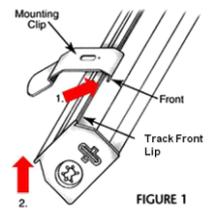

Step 4 – Fitting the vertical blinds


- Using the control chain, rotate the blind hooks so that they are 90° to the track.
- One by one, clip the vertical blinds into the hooks.
- Cut off the excess chain.

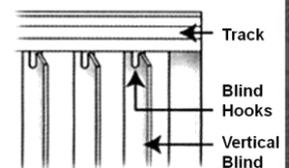

Note: You may be supplied a few extra blind panels, which you can store for later use in case you need to replace a panel.

Step 5 – Fit Child Safety Device

- Place the clip over the chain, so that the chain can slide through.
- Position the clip on the wall, so that there is enough free play to easily use the chain, but not tight so that it tensions the chain.
- Screw the clip firmly into place.
- Repeat for the control rope.

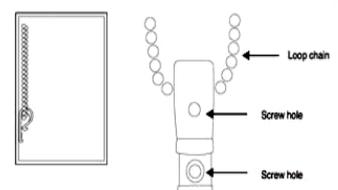

Please turn over to read warning →

WARNING:

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that loose cord or ball chain cannot form a loop 220mm or longer as measured along the perimeter of the cord. It should be secured at a height of more than 1600mm above floor level to ensure child safety.

A cord or ball chain guide may be installed lower than 1600mm above floor level, if the cord or ball chain is sufficiently secured or tensioned to prevent a loop of 220mm or longer being formed. If the cord or ball chain guide is installed lower than 1600mm above floor level, it must be installed so as to:

- A. prevent a child from being able to remove the cord or ball chain and;
- B. prevent a loop of 220mm or longer from being formed.