



Step 1 – Double Check Measurements & Check for Obstacles:

- Unpack your blind and fittings.
- Roughly place the brackets on each end of the blind.
- Hold the blind up to the position on the inside of the window you wish to install it to ensure all measurements are correct.
- Also, check for any potential obstructions such as handles – to try and avoid these when installing.

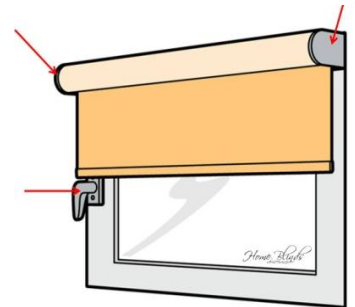


Step 2 – Chain Side:

Choose which side you want your chain operation and ensure you place the correct bracket on the correct side.

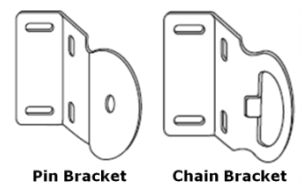


Step 3 – Fitting the brackets:

- Place the bracket so it aligns with the very top and edges of the inside of the window frame.
- Mark the screw holes with a pencil. *(You can use either the top or side screw holes when mounting recess)*
- Pre drill the window frame with a drill-bit smaller than the thickness of the screws *(approximately half the thickness of the screw)*. This will avoid the timber cracking.
- Screw each bracket firmly into place.

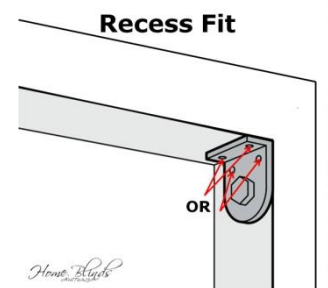


Step 4 – Fitting the Roller Blind

- Place the chain side of the blind into the appropriate bracket.
- Slide the pin side of the blind, through the guide on the bracket til you hear it "click" into place.

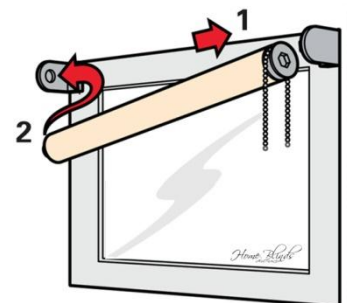

Step 5 – Fit Child Safety Device

- Place the clip over the chain, so that the chain can slide through.
- Position the clip on the wall, so that there is enough free play to easily use the chain, but not tight so that it tensions the chain.
- Mark the screw hole with a pencil & pre-drill *(the drill bit should be approximately half the thickness of the screw)*. This will avoid the timber cracking.
- Screw the clip firmly into place.

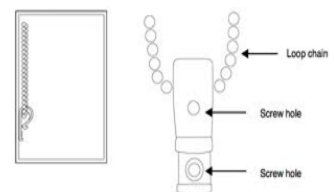

Please turn over to read warning →

WARNING:

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that loose cord or ball chain cannot form a loop 220mm or longer as measured along the perimeter of the cord. It should be secured at a height of more than 1600mm above floor level to ensure child safety.

A cord or ball chain guide may be installed lower than 1600mm above floor level, if the cord or ball chain is sufficiently secured or tensioned to prevent a loop of 220mm or longer being formed. If the cord or ball chain guide is installed lower than 1600mm above floor level, it must be installed so as to:

- A. prevent a child from being able to remove the cord or ball chain and;
- B. prevent a loop of 220mm or longer from being formed.